

SOKKIA Link

Registering SOKKIA Link

After installing SOKKIA Link into computer, you must register SOKKIA Link before use. Your computer has to connect to SOKKIA Instrument for registration.
(If SOKKIA Link has not been used after 60 days, you must re-register the software)

Steps to register:

1. Connect SOKKIA Instrument to computer
2. Open SOKKIA Link and click "Port Setup" from Setting Menu
 - 2.1. Set the COMM Port used and set 9600 Baud Rate
 - 2.2. Set Data bits to 8, stop bits to 1 and Parity None
 - 2.3. Click "OK" when complete
3. Click "Receive Data" from Data Menu
 - 3.1. Click <Connection>
4. Turn on the SOKKIA Instrument and set the Communication Setup
 - 4.1. Go to Comms Setup
 - 4.2. Set the Baud Rate to 9600 (same as computer)
 - 4.3. Set Data bits to 8, stop bits to 1 and Parity None
5. Select a output JOB file from Comms Output in the SOKKIA Instrument
6. Back on SOKKIA Link software - Receive Data" screen
 - 6.1. Flow of data will appear on screen
 - 6.2. Once complete data transfer, click "SDR Save File"
 - 6.3. Click "Exit"
7. Now the File menu is enabled
8. You have successfully registered the SOKKIA Link